



## How to adjust the Splice Tool

- 1) Loosen the two screws designated by **a**
- 2) Adjust the screw designated by **b** according to yr requirement.(choose to press tightly or loosely)
- 3) Finally, tighten the two screws designated by **a**